


# Online Well Tanks

## SPECIAL NOTE:

### TANK 'T' NOT SUPPLIED WITH TANK

Accessories such as Relief Valve, Pressure switch, and pressure gauge can be pre-plumbed into a short tank 'T' prior to installation on Well-Rite "Online" union connection

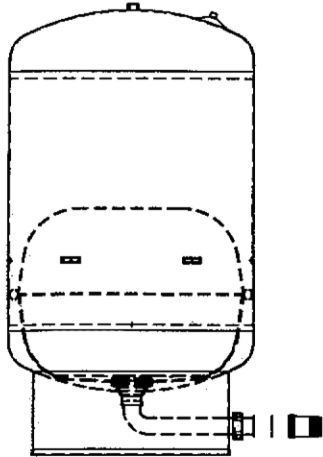

**Warning:** Install the expansion tank at a location to prevent water damage due to water leaks. The manufacturer is not responsible for any water damage in connection with this expansion tank.

1. Stand Well-Rite tank in desired position.
2. Thread tail piece(supplied) into short tank 'T' (not supplied).
3. Line up tank 'T' in desired (level) position. Hold tail piece and gasket to tube and tighten union nut only.

**NOTE:** Rubber Gasket  
Torque union nut to tail piece at hand tight plus a maximum of 1/2 turn.

Teflon Gasket  
Torque union nut to tail piece at hand tight plus a minimum of 1/3 turn.

Do not put a wrench on the stainless steel tube.

